

## Procedure for Updating the BIOS on a FieldServer

Updating the BIOS on the FieldServer is a simple procedure but could render the FieldServer unusable if the process is interrupted in any way. If possible try to connect the FieldServer to an UPS for the duration of the upgrade.

1. Obtain the latest BIOS update from FieldServer Technologies.
2. Extract the zipfile to a directory on your computer.
3. Download the “trojan.bat “ and “bios.bin” files to your FieldServer.
4. Reboot the FieldServer.
5. Observe that ALL 5 the system LED’s light up for approximately 15 seconds. This is the critical period when the flash devices are erased and then reprogrammed.
6. When the 5 LED’s switch off, the FieldServer will automatically reboot. Wait for the “Run” led to flash.
7. The BIOS has now been upgraded.